



ST. TROPEZ

BY C.R. PLASTIC PRODUCTS INC



B32 St. Tropez Love Seat

C.R. Plastic Products Inc.
1 – 533 Romeo Street South
Stratford Ontario N5A 4V3
Toll Free: 800-490-1283
Fax: 519-271-8544
www.crpproducts.com


A. Back

Qty: 1



B. Seat

Qty: 1

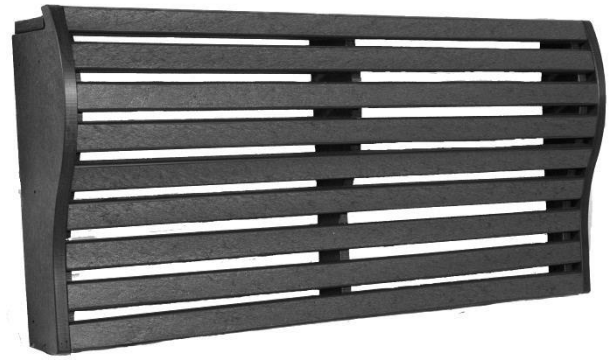

C. Left Arm

Qty: 1



D. Right Arm

Qty: 1



PARTS LIST:

A - Back

B - Seat

C - Left Arm

D - Right Arm

HARDWARE LIST:

22 – 1½” Screws

4 – 2” Screws


NOTE:

- Read these instructions carefully before assembling.
- Tools required: # 2 Phillips or #2 Robertson bit and power drill.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the plastic surfaces.
- Two people might be required for assembly.
- **Caution!! Do not over tighten screws.**

Step 1: Set the Left Arm (C) flat on the floor Fig. 1. Line up Seat (B) keeping bottom edge of seat flush with bottom edge of center rail of arm. Keep front edge of seat back 1/8" from front of leg, (detail V) and attach with 6 - 1 1/2" screws.

Figure 1

Required	Qty
Seat (B)	1
Left Arm (C)	1
1 1/2" Screws	6

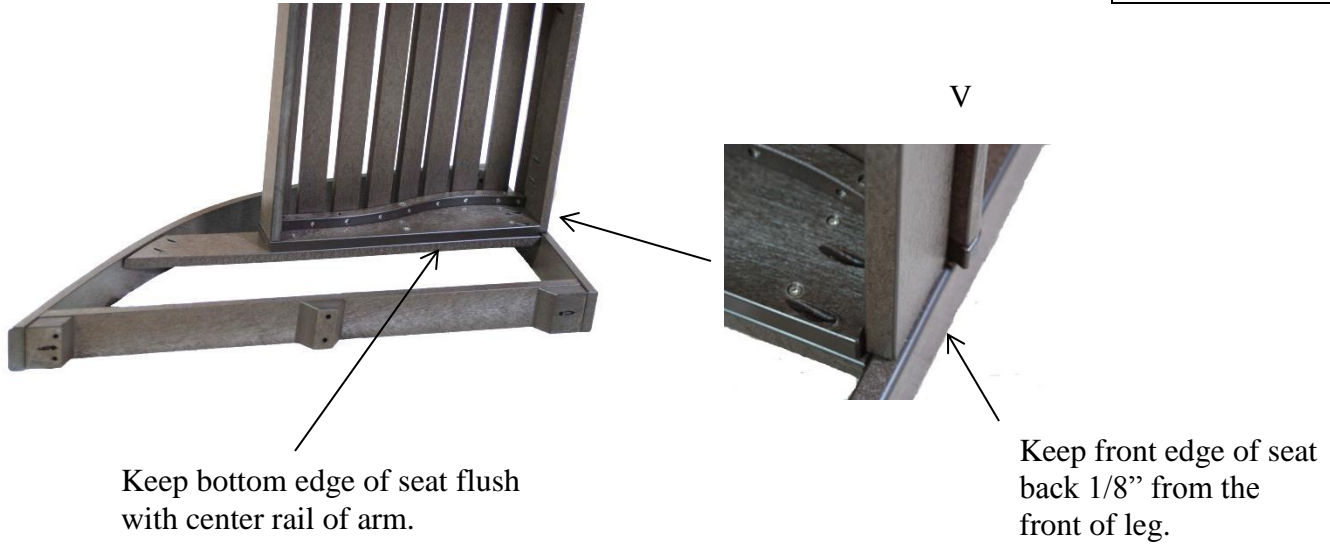


Step 2: Using Right Arm (D) to balance Back (A) Fig. 2. Line up Back (A), (detail W). Insert 2 - 2" screws to attach the back to the curved arm rest keeping screw holes centered on arm.

Step 3: Insert 4 - 1 1/2" screws (detail W).

Step 4: Insert 1 - 1 1/2" screw keeping hole centered on seat board (detail X) then insert 2nd 1 1/2" screw.

Required	Qty
Back (A)	1
Right Arm (D)	1
1 1/2" Screws	6
2" Screws	2

Figure 2

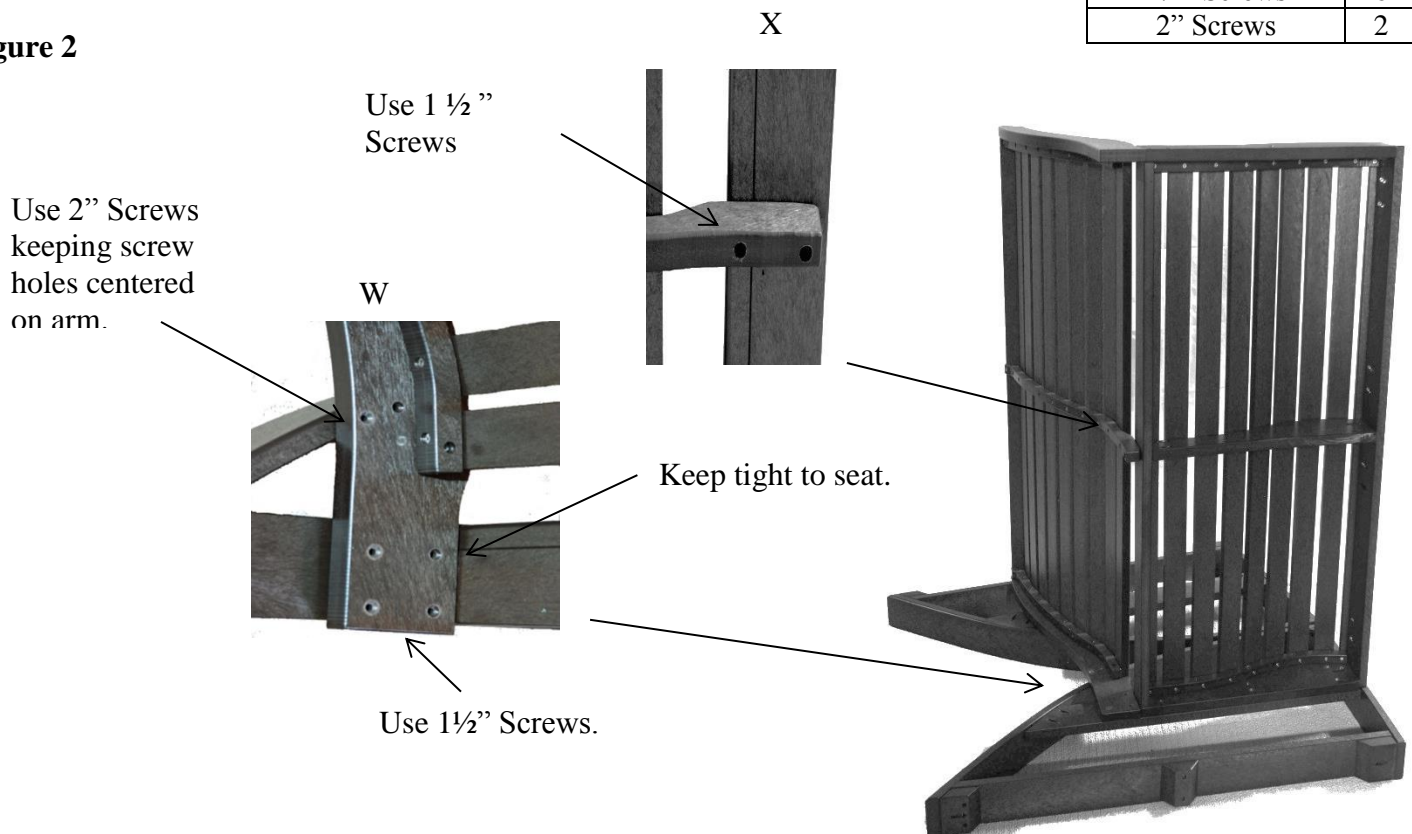

Step 5: Flip assembled part of love seat over on to Right Arm (D), keeping bottom edge of seat flush with bottom edge of center rail of arm. Keep front edge of seat back 1/8" from front of leg, (detail Y) and attach with 5 - 1 1/2" screws.


Step 6: Line up back and insert 2 - 2" screws to attach the back to the curved arm rest, (detail Z) keeping screw holes centered on arm.

Step 7: Insert 4 - 1 1/2" screws. (detail Z)


Required	Qty
Right Arm (D)	1
1 1/2" Screws	10
2" Screws	2

Figure 3


Keep front edge of seat back 1/8" from the front of leg.

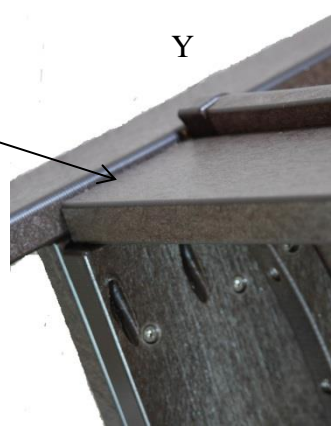

Keep bottom edge of seat flush with center rail of arm.

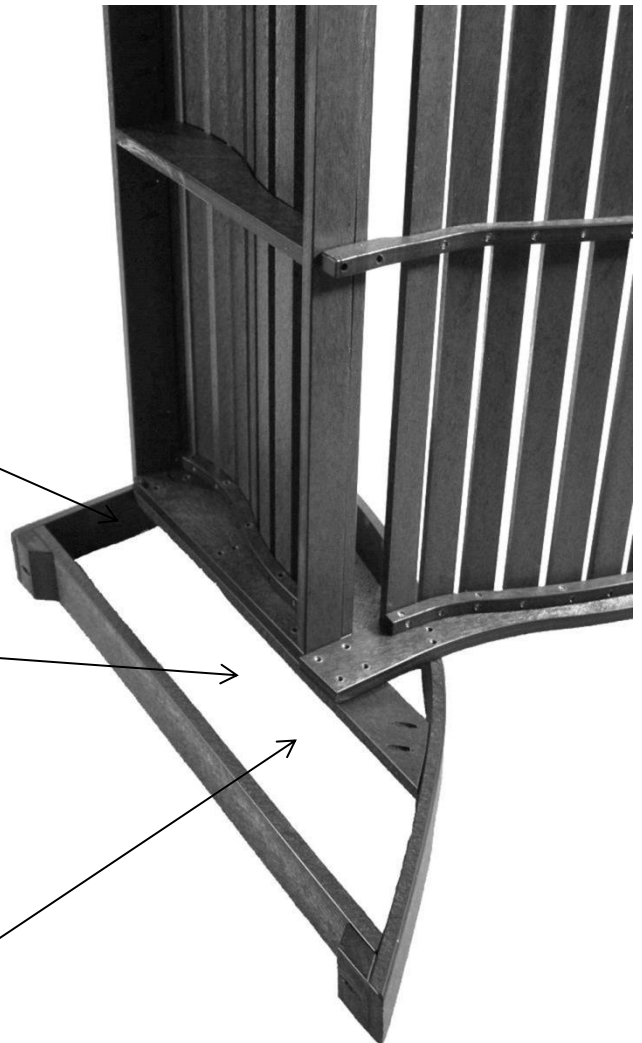

Keep tight.

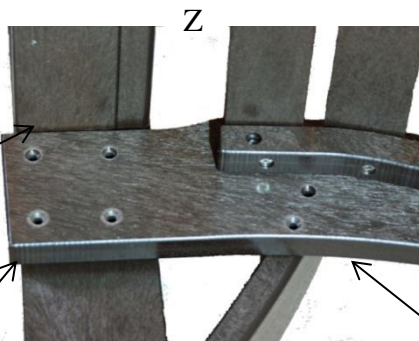

Use 1 1/2" screws

Use 2" Screws keeping screw holes centered on arm.