






ST. TROPEZ

BY C.R. PLASTIC PRODUCTS INC



C36 St. Tropez Counter Chair

C.R. Plastic Products Inc.
1 – 533 Romeo Street South
Stratford Ontario N5A 4V3
Toll Free: 800-490-1283
Fax: 519-271-8544
www.crpproducts.com

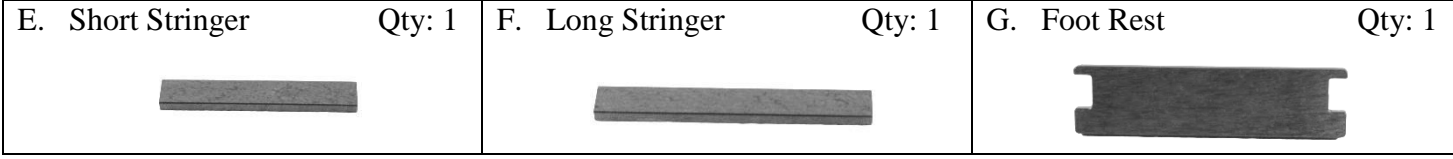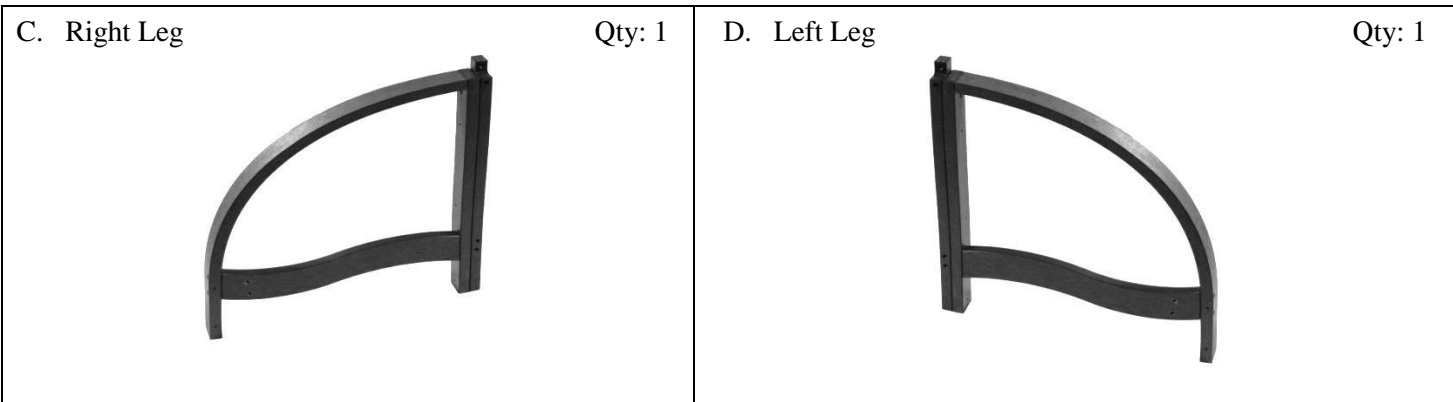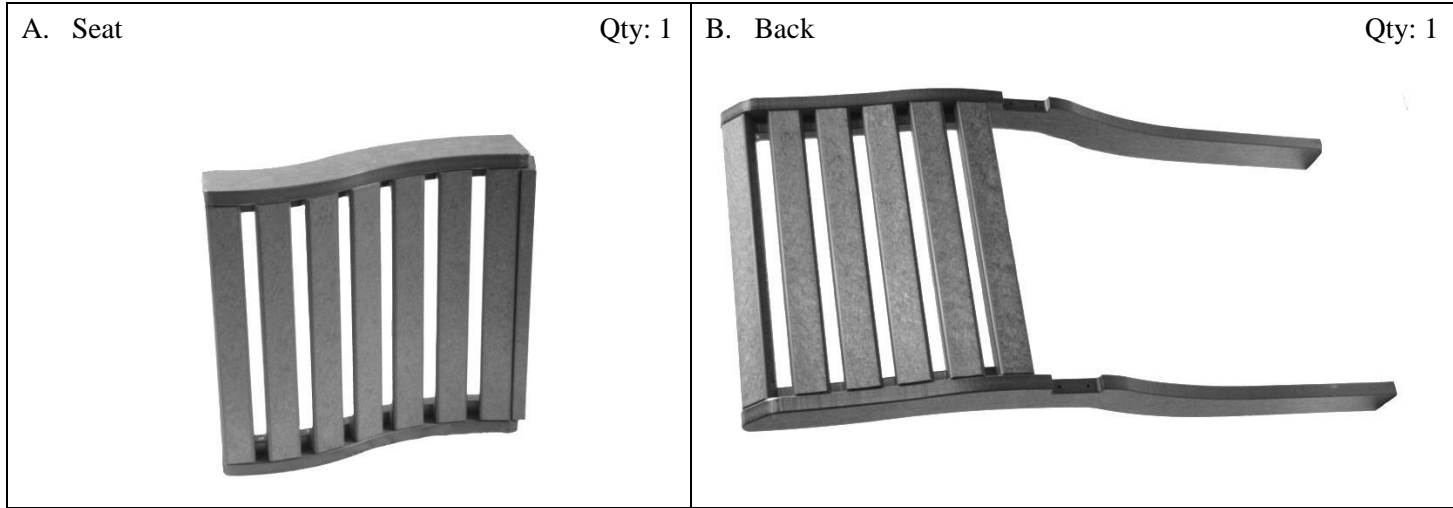

PARTS LIST:

- A - Seat
- B - Back
- C - Left Leg
- D - Right Leg
- E - Short Stringer
- F - Long Stringer
- G - Foot Rest

HARDWARE LIST:

- 9 – 1½” Screws
- 14 – 2½” Screws


Note:

- Read these instructions carefully before assembling.
- Tools required: # 2 Phillips or #2 Robertson bit and power drill.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the plastic surfaces.
- Two people might be required for assembly.
- **Caution!! Do not over tighten screws.**

Step 1: Attach Short Stringer (E) to Right Leg (C) using 1 - 1½” screw and 1 - 2½” screw. Detail X
Repeat for Left Leg (D).

Required	Qty
Right Leg (C)	1
Left Leg (D)	1
Short Stringer (E)	1
1½” Screws	2
2½” Screws	2


Figure 1

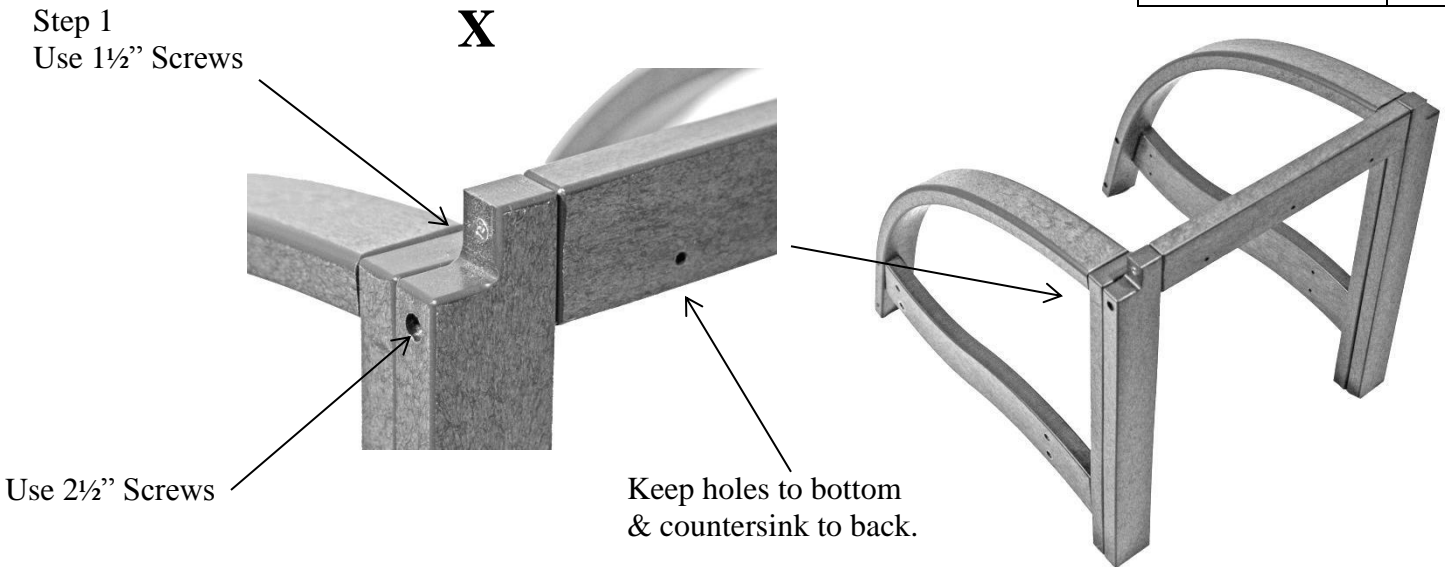

Step 2: Attach Leg assembly from step 1 to Seat (A). Use 3 - 1½” screws.

Required	Qty
Seat (A)	1
1½” Screws	3

Figure 2

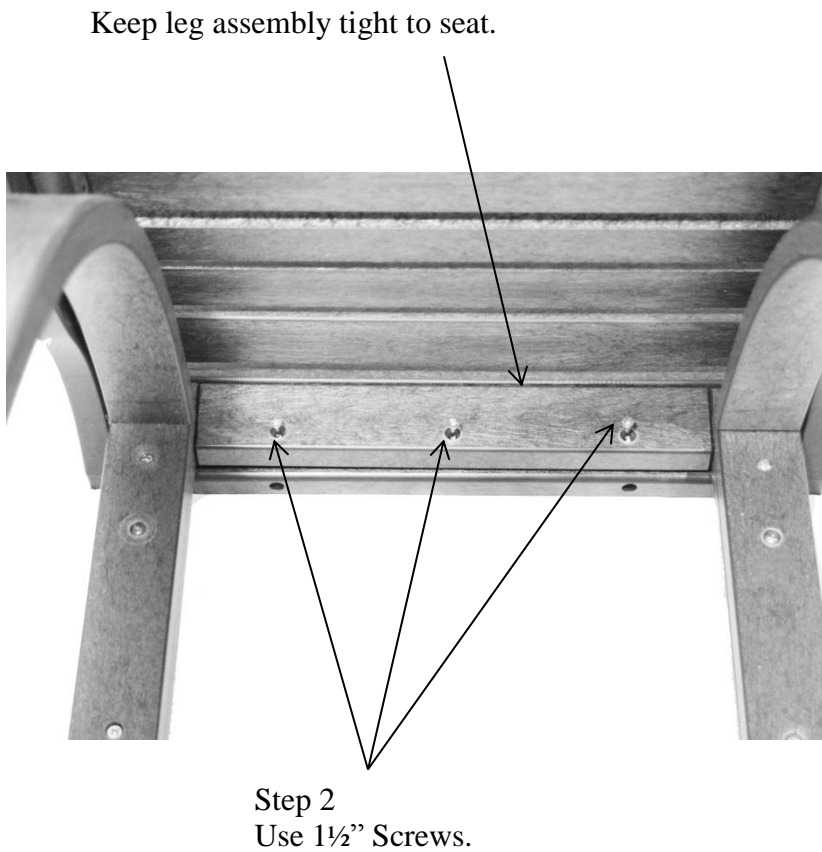

Step 3: Attach Back (B) to leg supports with 4 - 2½” screws (detail Y).

Step 4: Attach Back (B) to seat with 4 - 2½” screws.

Step 5: Attach back Long Stringer (F) with 4 - 1½” screws.

Step 6: Attach Foot Rest (G) with 4 - 2½” screws..

Required	Qty
Back (B)	1
Long Stringer (F)	1
Foot Rest (G)	1
1½” Screws	4
2½”Screws	12

Figure 3

